



- Change **Printer Name:** to *EasyRibbons EZ16* or a name you will remember
- Uncheck **Use this printer as the default printer**
- Click **Next**


- Click **Finish**

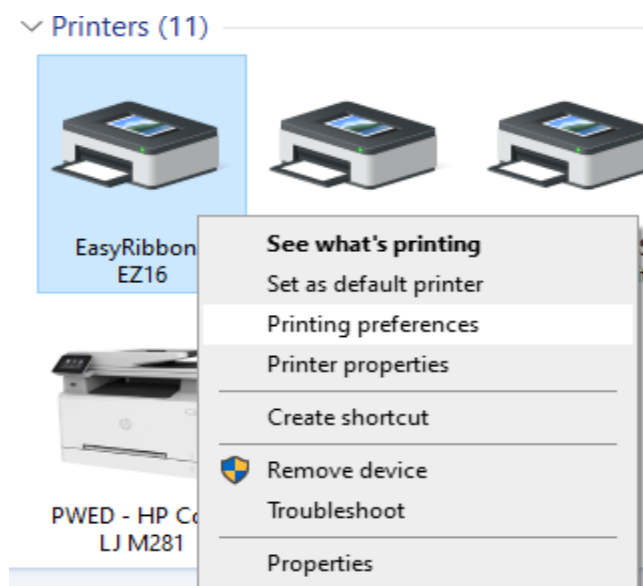


- Go to **Control Panel** → **Devices and Printers**
- Right click on the **EasyRibbons EZ16** printer icon
- Select **Printing preferences** from the pop-up menu

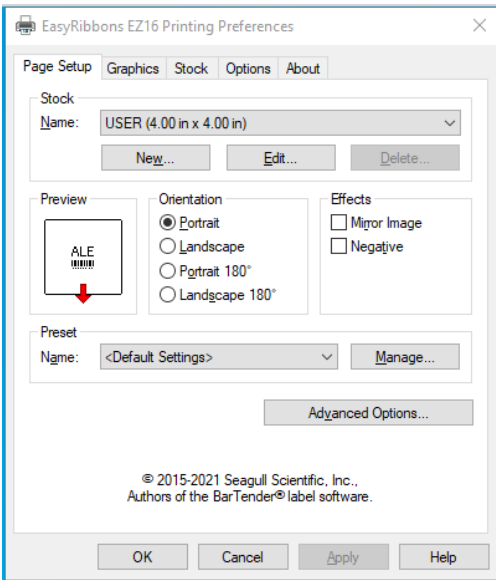


- In the Stock section on the **Page Setup** tab click **Edit...**

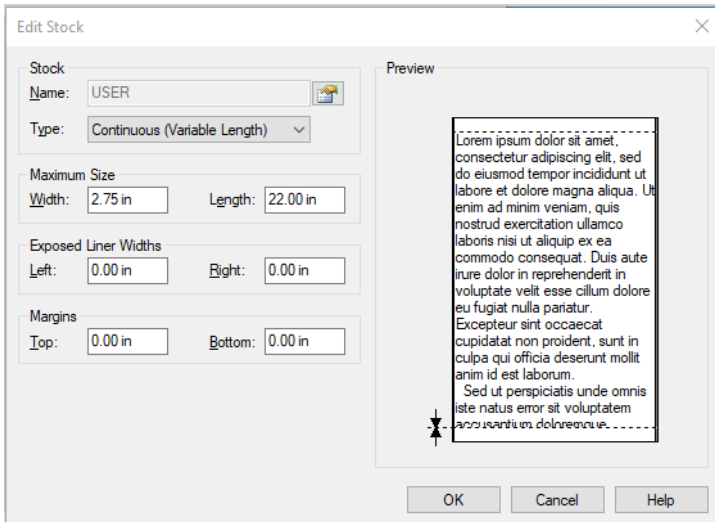


- Select **Continuous (Variable Length)** from the Type: drop down menu
- Set the Width: to 2.75 (or the width of the normal ribbon you use if not EasyRibbons #40 ribbon)
- Set the Length: to 22
- Set the other dimensions to 0
- Click **OK**

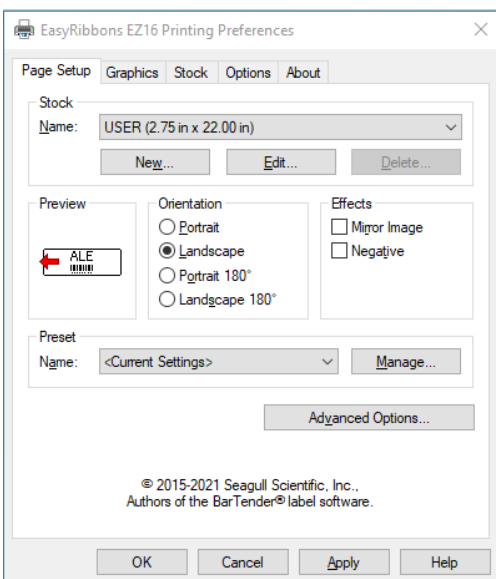


- Set Orientation to **Landscape**
- Click on the **Graphics** tab

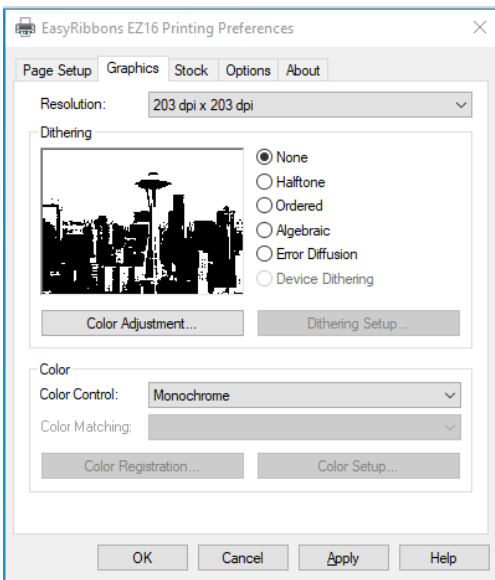

- In the Dithering section select **None**
- Click on the **Stock** tab

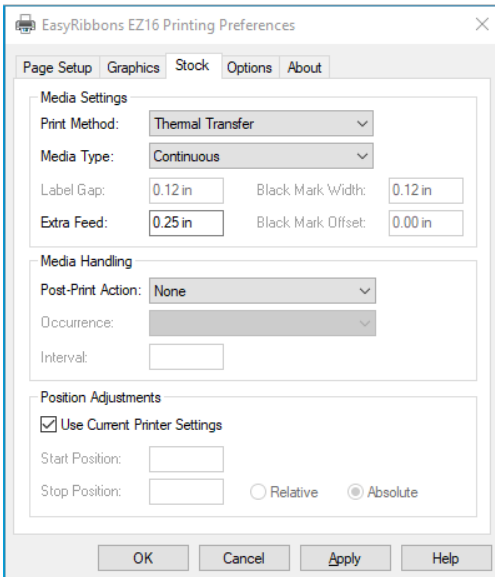

- In the Media Settings section set the Print Method: to **Thermal Transfer** and the Media Type: to **Continuous**
- Change Extra Feed: to .25
- Click on the **Options** tab

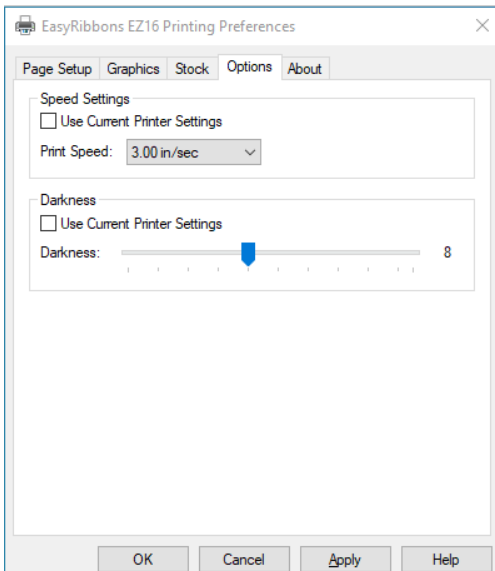

- In the Speed Settings section uncheck **Use Current Printer Settings** and set the Print Speed: to **3.00 in/sec**
- In the Darkness section uncheck **Use Current Printer Settings** and set the Darkness: slider to:
  - for SuperGold and Matt Silver - **8**
  - for Black and Bronze – **4**
  - **Note:** This is the heat setting for the printhead and can be adjusted from these settings to achieve the best results. **Caution:** If set too high the film will melt.

Click on **OK** and you're ready to print.