

## EasyRibbons EZ16

### *Installing the print film*


1. Install the empty take-up spool on top of the printer.  
The large end of the spindle needs to be on the left so the square end inserts in the wheel.




2. Insert the other spindle in the new roll of film so the clear lead comes from under the roll.



3. Install the roll of film on the under the print head, with the square end inserted in the wheel and the film lead from under the roll.

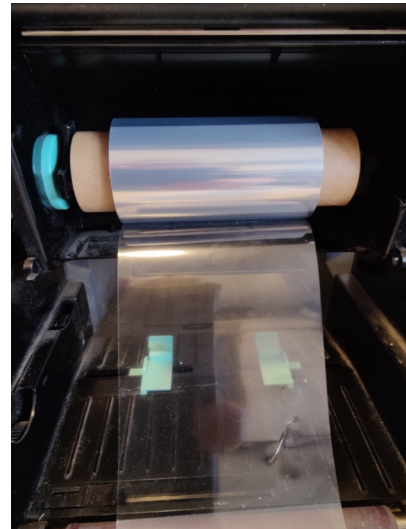

4. Pull the clear leader from the new roll, up over the front of the printer, and attach the tacky lead to the empty roll.

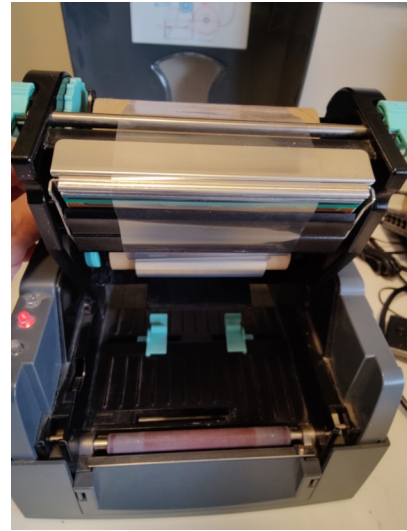

5. Turn the wheel to advance through the clear lead until the silver backing of the film advances around the front of the printer.

6. Close the printhead and you're ready to print.

